



Assembly & Post Mounting Instructions

Cora Bike Rack - E3VR-P (for Mounting E3VR-45 Racks)

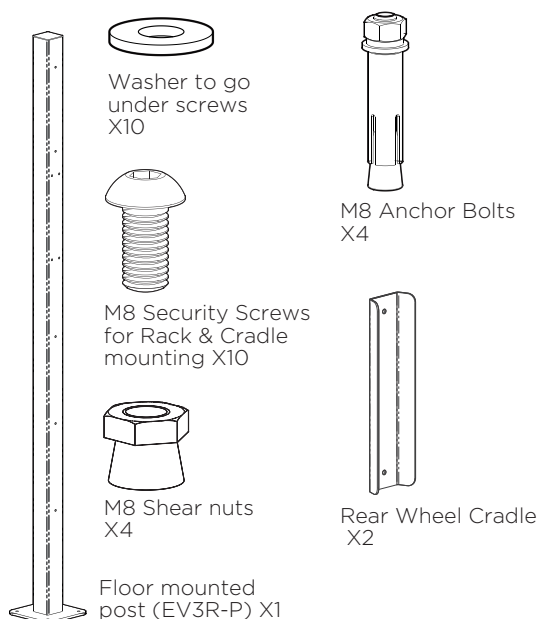


1. If mounting multiple posts, measure mounting distance between posts and other obstructions

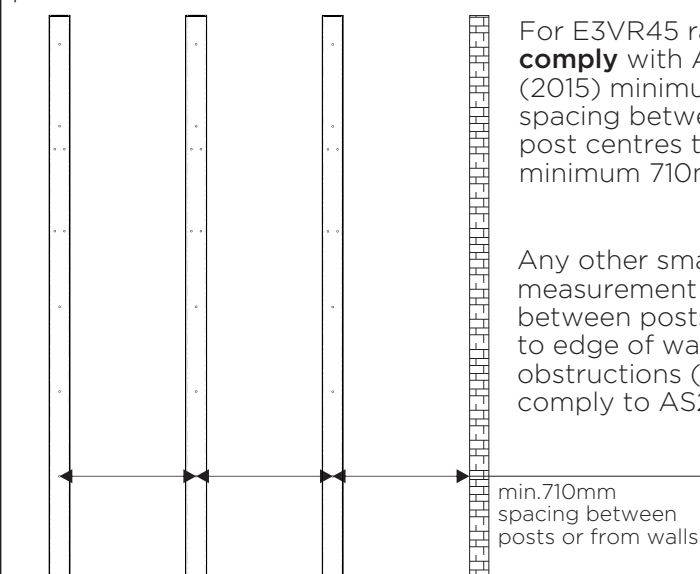

For E3VR45 racks, To **comply** with AS2890.3 (2015) minimum 500mm spacing between bikes, post centres to be minimum 710mm.

Any other smaller measurement of spacing between posts centres and to edge of walls or other obstructions (this will not comply to AS2890.3)


2. Drill holes in floor for location of anchor bolts

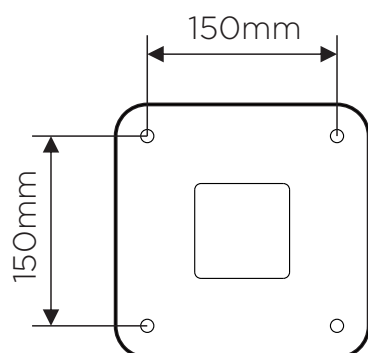

- Use dimensions above for anchor bolt drill hole locations
- Drill or core hole 10mm diameter and 80mm min. depth


3. Fix post to floor

- Locate post in position
- Insert four (x4) anchor bolts into holes ensuring washer is firmly against post base plate
- Tighten anchor bolts with standard supplied nut
- Gently removed standard nut from anchor and replace with supplied four (X4) shear nuts
- Tighten shear nuts until head snaps off

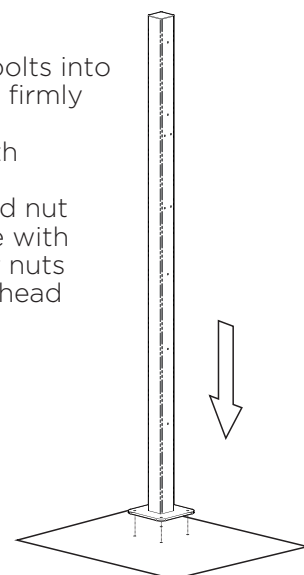

4. E3VR45-L/ E3VR45-R Post mounting

- There are upper and lower mounting positions on each post.
- Use **only** the post mounting fixings included with the E3VR-P post
- Do not use the wall mount fixings included with each E3VR45-L or E3VR-45-R rack, **but** keep the security screw tool bit.
- NOTE: The E3VR-P includes fixings and rear wheel cradles for use on both sides of post. You may only require fixings and rear wheel tray for single sided use.*

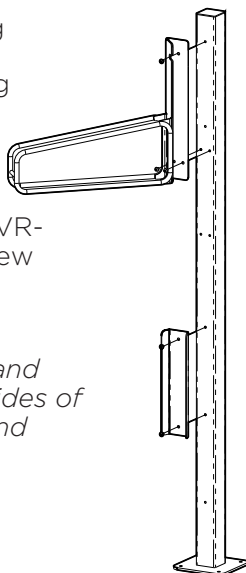


Rack in top position

- If rack is in top location, rear wheel cradle should use upper two holes in base of post
- Use supplied security screws with one (1) screw and one (1) washer per hole

Rack in lower position

- If rack is in bottom location, rear wheel cradle should use lower two holes in base of post
- Use supplied security screws with one (1) screw and one (1) washer per hole

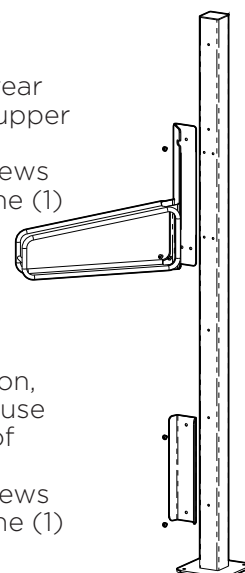


***NOTE:** E3VR45-L Shown in image. Mounting of E3VR45-R should follow same instructions

Assembly & Post Mounting Instructions

Cora Bike Rack - E3VR-P (for Mounting E3VR-45 Racks)

5. Rack positions on post, for single or multiple post

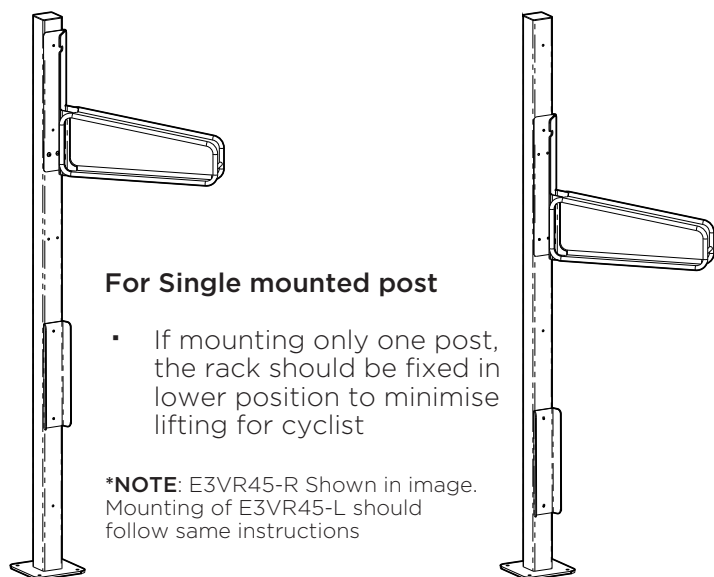

For Single mounted post


- If mounting only one post, the rack should be fixed in lower position to minimise lifting for cyclist

***NOTE:** E3VR45-R Shown in image. Mounting of E3VR45-L should follow same instructions

For Multiple mounted posts

- If multiple posts are mounted in a row. Racks must be alternated in location on pole

6. Dual sided mounting of racks to post

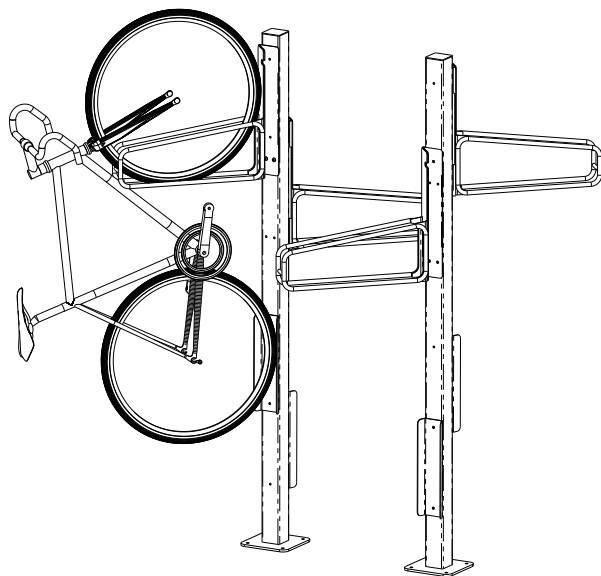


Dual sided mounting of racks to post

- Racks can be mounted to both sides of post
- For multiple post installations, rack locations on post should be alternated, on both sides of post

***NOTE:** E3VR45-L shown in image. Mounting of E3VR45-R should follow same instructions

7. Access and clearance around mounted racks

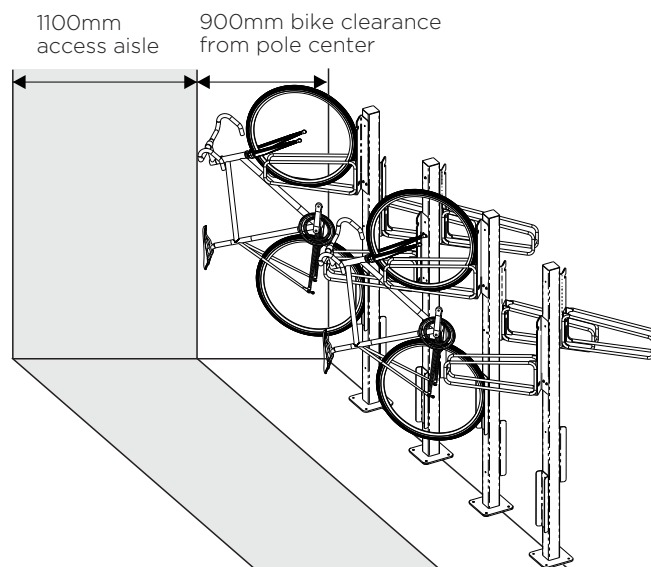

Access dimensions around posts and racks


- Posts are to be mounted with minimum clearance zones from any side a rack is mounted.
- Min. 900mm from post center for bike clearance, min. 1100mm additional for access aisle.

Assembly & Post Mounting Instructions


Cora Bike Rack - E3VR-P (for Mounting E3VR-45 Racks)

Configuration mounting options for E3VR45-L & E3VR-R racks


Single side, or dual side pole mount options (single or multiple pole installs)

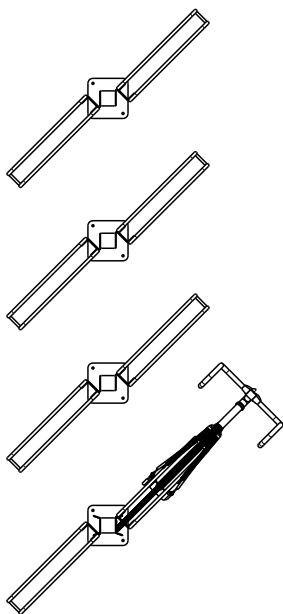

E3VR45-R Only Shown mounted to both sides of E3VR-P

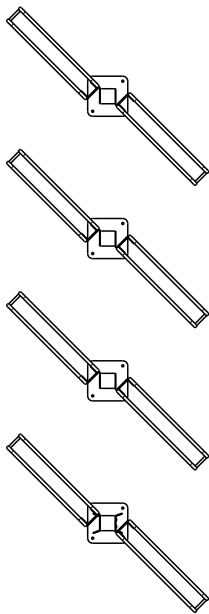


E3VR45-L Only Shown mounted to both sides of E3VR-P

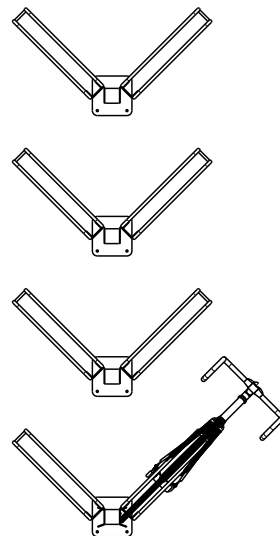

E3VR45-L & E3VR45-R Combo Shown mounted to either side of E3VR-P

Double sided, double row layout

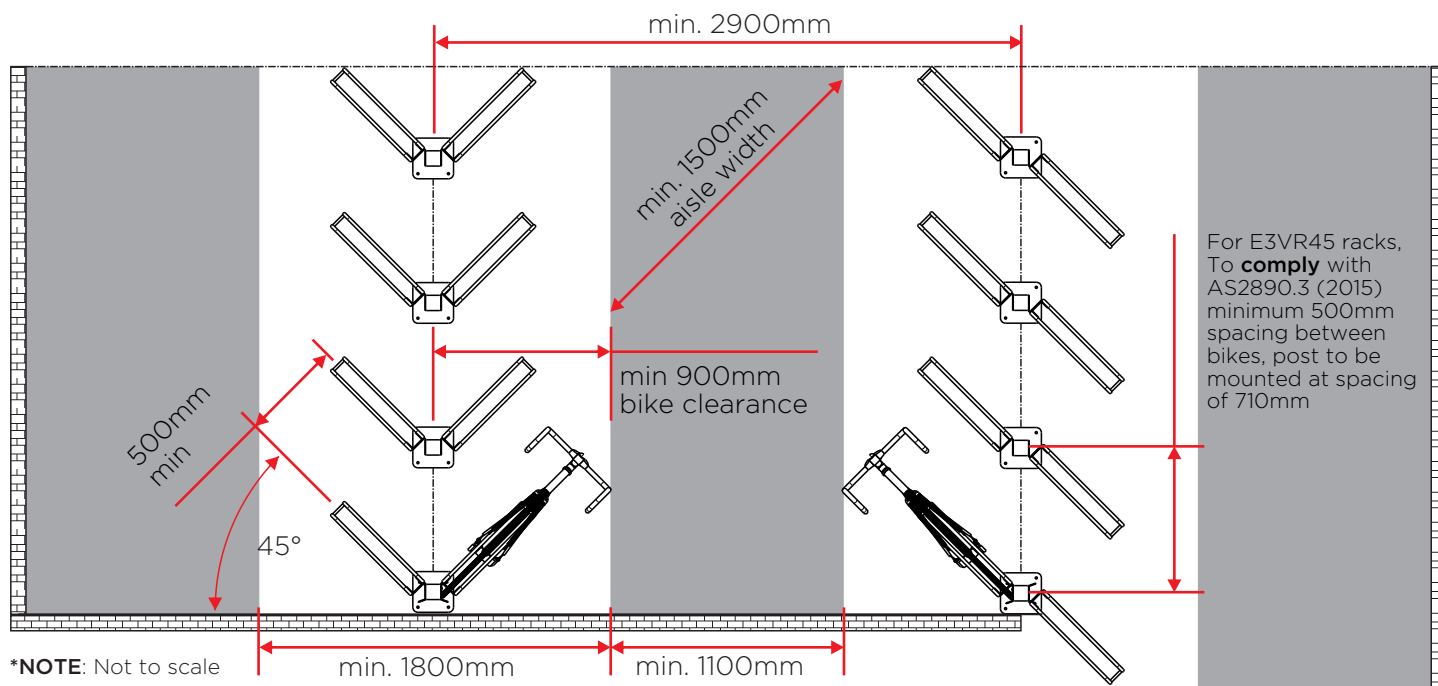

*NOTE: Not to scale

CORA BIKERACK

Australia's Bike Parking Experts

PH 1800 249 878
sales@cora.com.au
www.cora.com.au

